INSTALLATION INSTRUCTIONS

For Model 72425-212 (Rev. 02/22/2014)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARING FOR INSTALLATION (Fig. 2)

1. Shut off the power at the fuse box or circuit breaker box and remove the old fixture from the ceiling, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Thread the nipple into the ceiling loop until snug.
4. Thread the other end of the nipple into the crossbar until snug. Note: The length of the nipple into the crossbar may be adjusted if necessary.
5. Use the lock washer and hex nut to secure the nipple into the crossbar.
6. Take this crossbar assembly and mount it to ceiling outlet box with mounting screws (Size: #8-32N*L0.5"). The side of crossbar marked with "GND" must face out.
7. Determine the desired hanging height and use a pair of proper chain pliers to remove and discard the excess chain.
8. Open one end of chain and attach it to the fixture loop and close the chain. Slip the canopy and lock collar over the chain and allow them to rest on the fixture body. Open the other end of the chain and attach it to ceiling loop and close the chain.
9. Carefully lace the fixture's wires through the chain. Feed the fixture wires through the loop and nipple assembly.

CONNECT THE WIRES (Fig. 3)

10. Connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw provided.
11. Tuck these wire connections neatly into the ceiling outlet box and then raise the canopy all the way to the ceiling. Raise the lock collar and thread onto ceiling loop protruding through canopy (Fig.2).

COMPLETING THE INSTALLATION (Fig. 1)

12. Pull up the latch (B) and open the door.
13. Then install the glass (C) using the glass clips on the frame (A). (Note: Install the back glass first followed by the side glass. The front glass should be installed last)
14. Install 4*60W B10.5 bulb(s) (not included) in accordance with the fixture's specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)(NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).**
15. When replacing the glass (C), pull up the latch (B) and open the door. Loosen the clips and remove glass (C). (Note: You must remove the side glass, just remove the back glass.) After replacing the glass, repeat step 13, and then close the door.
16. For installing or replacing bulbs at a later date, pull up the latch (B) and open the door. (Fig.1)

Your installation is now complete. Return power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

Fig.1

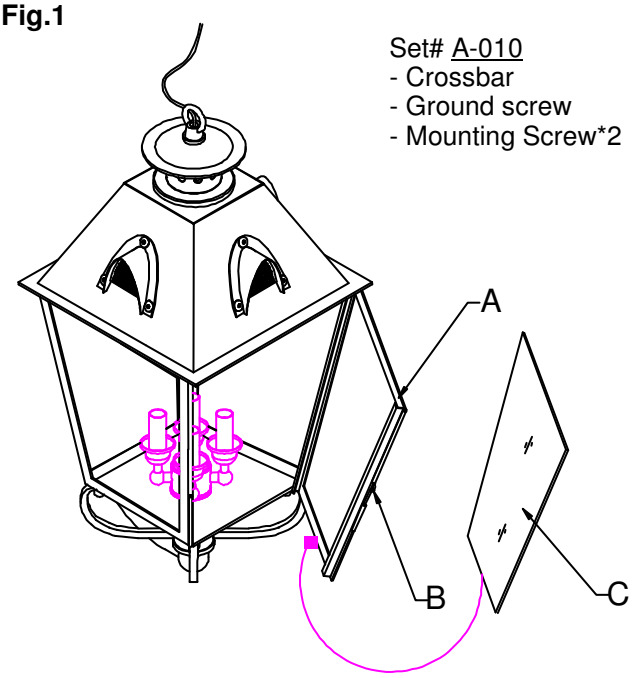

Fig.2

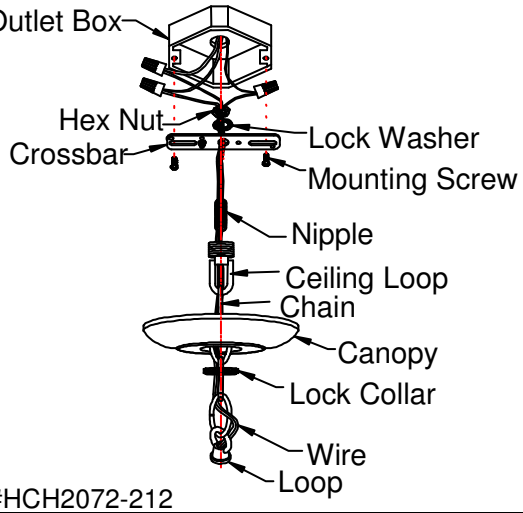

Chain#HCH2072-212

Fig. 3

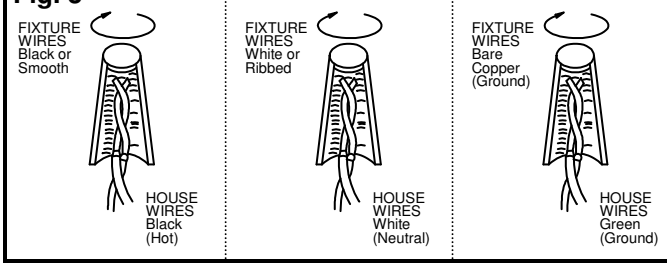
FIXTURE WIRES Black or Smooth
HOUSE WIRES Black (Hot)
FIXTURE WIRES White or Ribbed
HOUSE WIRES White (Neutral)
FIXTURE WIRES Bare Copper (Ground)
HOUSE WIRES Green (Ground)

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

LA-2397E

Intertek

american lighting association